

WALL MOUNT BRACKET Instruction sheet

Part Number: 548598



This bracket has been designed to mount on non-combustible walls, i.e. brick, block, concrete etc.

The ideal cooking height for the Grill of the BBQ is 900mm from the ground, this would mean mounting the wall mount at approximately 750mm from the ground to allow for the height of the BBQ. These distances can be adjusted to suit your personal requirements.

INSTRUCTIONS

Find a clear space on a non-combustible wall to mount the wall bracket. Ensure there is nothing mounted above the BBQ closer than 1,500mm and closer than 1,000mm on either side.

Do not mount the wall bracket underneath a window.

Ensure the wall bracket is mounted on a surface which is not subject to wind or rain.

1. Place the wall bracket on to the wall at the height that suits you (approximately 750mm from the ground) and mark the hole locations (using the bracket as the template) on to the wall. The use of a spirit level will help to get the wall bracket sitting perfectly horizontal.
2. Drill the 4 holes to suit the mounting hardware selected. It is recommended to use all 4 of the fasteners to secure the bracket to the wall.
3. Clean the wall of any dust/debris and proceed to mount the wall bracket securely to the wall. **Note: Mounting slots pointing upwards.**
4. The bracket is now ready for the BBQ to sit in. Please note that there are two adjustment screws on the bracket which ensure the BBQ is able to be leveled up. See over page.



WARNING: Failure to use all 4 holes could result in the bracket not securing to the wall correctly.

NOTES

This wall mounted bracket is not designed to hang the Gas bottle, a hook for this application is available at any hardware outlet.

Mounting hardware is not provided with the wall mount as there are several methods of mounting depending on the wall construction.

The support rail of the bracket (shown in photo 2) is not fully enclosed and this is to allow for the drip tray to pull out and be cleaned easily without removing the BBQ.



P.T.O

⚠ WARNING

- Do not use indoors. Barbecue units are designed for OUTDOOR USE ONLY.
- Use in a weather-protected area, preferably under shelter.
- Do not use within one metre of any flammable surface or structure.
- Failure to follow these instructions could result in fire or explosion which could cause property damage.
- The Manufacturer's Warranty may be voided by the incorrect use of this product.
- Never try to move the barbecue when it is on, or before it has had time to cool down.

WARRANTY

Refer to the warranty supplied with the Masport BBQ. Should any part fail due to defective workmanship or faulty materials within the specified period from the date of purchase, Masport will replace or repair the defective part free of charge.

OWNER'S MANUAL

- If you have any queries regarding these instructions, contact your local Masport dealer for clarification before you use your barbecue.

